



## OPERATING INSTRUCTIONS FOR USE OF POINT SAFE WITH DIGITAL LOCK

BURG-WÄCHTER KG  
Altenhofer Weg 15  
58300 Wetter  
Germany

[www.burg-waechter.de](http://www.burg-waechter.de)

### IMPORTANT ADVICE

- Please keep your codes and emergency keys in a safe place – but not in the safe!
- Do not use any personal dates (e.g. birthday, telephone no. ....)
- If the safe is unlikely to be used for a long time, remove batteries.
- For hotels: See text below on the right hand side and attached guest code instructions.
- For your own security, change both master code and user code from their factory settings.
- If further advice is required, please contact your local retailer or Security Centre.

### USING YOUR POINT SAFE FOR THE FIRST TIME

Slide cover plate marked 'Point Safe' away from keypad to the right hand side in order to reveal the keyhole.

Turn the key clockwise until the stop. The door opens automatically. Turn the key back anti-clockwise – the bolts will extend again – and remove the key. Remove the battery cover on the inside of the door. Insert 5 batteries LR6/AA/1.5V/Alkaline.

**ATTENTION:** When new batteries are required the LCD display shows 'LO BATT'. All 5 batteries have to be replaced then. Please see that the batteries will be disposed ecofriendly.

### OPENING OF THE SAFE

Press the "Enter" button. Enter the **user code (factory code 168)** and press the "Enter" button. The door opens automatically.

### CLOSING THE SAFE

The door will close automatically when the "Close" button is pressed.

**ATTENTION:** In case the door is blocked by an obstacle, the LCD will display "BLOCK". The safe cannot be closed then. Remove the obstacle and try again.

### CHANGING TO A NEW USER CODE

The door has to be open and the bolts have to be engaged. Press the "Enter" button, the LCD will display "Code", enter the new user code (1- max. 6 digits), press the "Enter" button and then the "Close" button. The door closes automatically.

### INCORRECT CODES

In a closed state the safe will not accept any incorrect codes. In such a case the LCD will show "ERROR" and short tones can be heard. If an incorrect code is entered three times the electronic will block the safe for 5 minutes.

Once this period has passed the safe can be opened with the master code as well as with the correct user code. If an incorrect digit has been entered by mistake it can be deleted by pressing the "Close" button.

## CLOCK TIME ADJUSTMENT

The bolts have to be extended. Press the "SET" button – the hour display is blinking. Press the "H/M" button until the required hour is displayed.  
(Hour display: A 1-12 = 1-12 o'clock, P 1-12 = 13-24 o'clock). Press the "SET" button – the minute display is blinking. Press the "H/M" button again until the required minute is displayed. For confirmation press the "SET" button.

## INSTALLATION

The safe reaches its intended protective function only after it has been fixed to a massive part of a building. Please use the marked fixing points (at the wall and/or on the floor) in order to secure the necessary local connection.

## OPENING THE SAFE WITH THE MASTER CODE

Press the "Enter" button, enter the **master code (factory code 12345678)** and press the "Enter" button again. The LCD will show "PASS 1", starting a 10 second count. Once this period has passed the user code will be displayed for a short moment and the door opens automatically. **ATTENTION:** In order to close the safe the user code must be entered anew (see also "Changing to a new user code").

## CHANGING OF THE MASTER CODE

The door has to be open and the bolts have to be extended. Press the "Enter" button, enter the master code (factory code 12345678) and press the "Enter" button. The LCD will display "PASS 1", starting a 10 second count. Press the "Enter" button again within this 10 sec. period. Now enter the new master code (8 digits), press the "Enter" button, enter the new master code for a second time and press the "Enter" button once more. If the LCD shows "Good", the electronic has now saved the new code.

## SPECIAL FEATURE HOTEL VERSION:

If you want to use the safe in the Hotel version, it can be shifted from the normal mode to the Hotel mode with the master code. The door has to be opened and the bolts have to be extended. Press "Enter", enter your 8-digit master code and press "Enter" again. The LCD shows "PASS 1", starting a 10 second count. Press the "Enter" button within this 10 sec. period, enter the code "16805" and confirm the shifting by pressing "Enter". The LCD shows "SET-05". If now the door remains open for more than 5 minutes, the user code has to be entered again. If you want to shift back to the normal mode please proceed as mentioned above and use the code "16800" in the according point. "SET-00" will appear on the LCD and the user code will be valid indefinitely also when the door is open.

## TECHNICAL INFORMATION

Power supply: 5 x LR6/AA/1,5V batteries (Alkaline)  
Working humidity: 20%~95% rH – non-condensed / non-condensing

