


Where and how can one download the ConfigApp?


With entering the search keyword „**secuENTRY**“ in the Google Play Store, you are immediately being directed to the download area of the App.

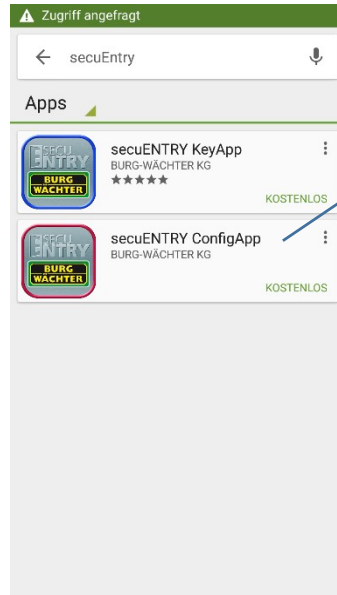

Select



Install

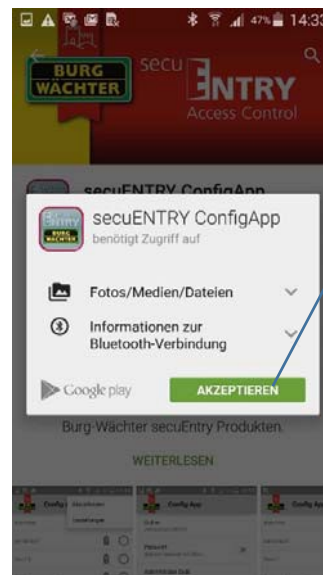

Accep

After the installation, the ConfigApp is immediately operational



Open

With the first starting of the App, the licence terms need to be accepted. Read the conditions and confirm with "OK".

Lizenzbestimmungen
Wichtiger Hinweis: Lesen Sie diesen Nutzungsvertrag vollständig durch und nutzen Sie das Programm nur dann, wenn Sie sich mit den Bedingungen einverstanden erklären. Wir behalten uns vor die Nutzungsbedingungen zu ändern. Die neuen Nutzungsbedingungen gelten ab dem Datum der Veröffentlichung und können unter www.cloud1.burg.biz eingesehen werden. Die Burg-Wächter Software darf ausschließlich für die in den Nutzungsbedingungen genannten Bestimmungen eingesetzt werden. Nutzung ist jedes dauerhafte oder vorübergehende ganze oder teilweise Speichern, Laden, Ablaufen oder Anzeigen von Daten zum Zweck der Ausführung des Programms und Verarbeitung von im Programm enthaltenen Daten durch den Computer oder ein anderes elektronisches Gerät.
§ 1 Copyright:
ABBRECHEN OK


Lizenzbestimmungen
Deutschland.
§ 9 Beschränkungen
=====

1. Die Software darf nicht für militärische, strategische, medizinisch kritische Anwendungen oder illegale Zwecke eingesetzt werden.
2. Die Software darf nicht auf manipulierten Computern bzw. elektronischen Geräten wie z.B. rooted jailbroken Smart Devices installiert und betrieben werden.
3. Die Software darf nur für den vom Hersteller angegebenen Verwendungszweck eingesetzt werden.

20060707HL
ABBRECHEN OK

Confirm


Now, you are being asked to add the about to be programmed locks to the ConfigApp.

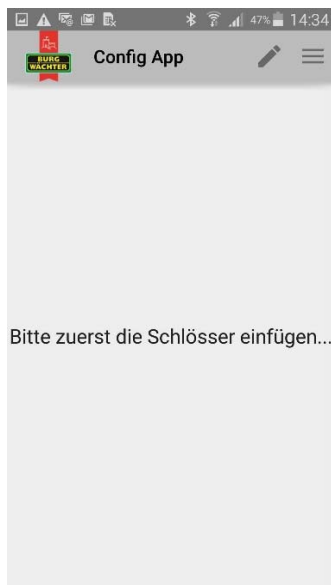

How are the about to be programmed locks added to the ConfigApp ?


Under „Data transmission“, the ENTRY software automatically prepares the file with the programmed locks as a zip file. This file only needs to be sent to the smart device.

There is a distinction between a plenary programming and a delta programming.

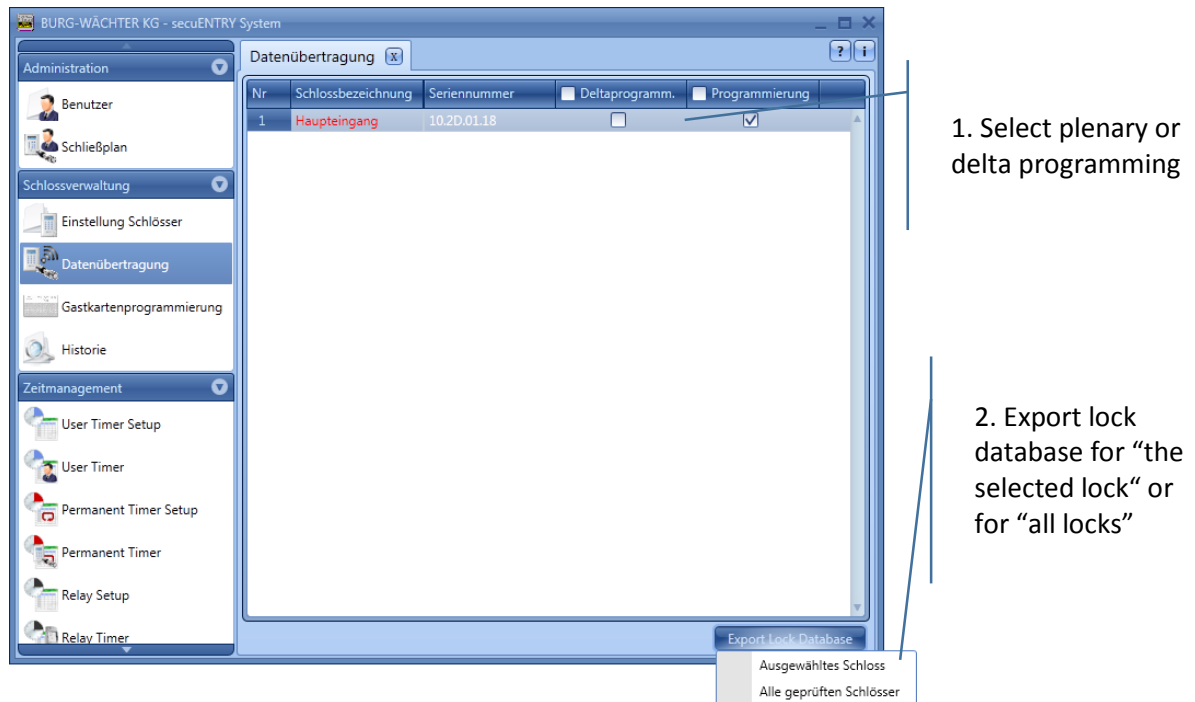

3. The administrator code that has been set in default settings under administration is pre-set. If you program a new lock, you first need to delete the deposited administrator code and then add the one of the respective lock. Otherwise, the data will be transmitted but not adopted by the lock.


Subsequently, with the first programming of a new lock, select Change Admin. Code, to change the administrator code of the lock or to change the code that has been saved by you in the default settings.

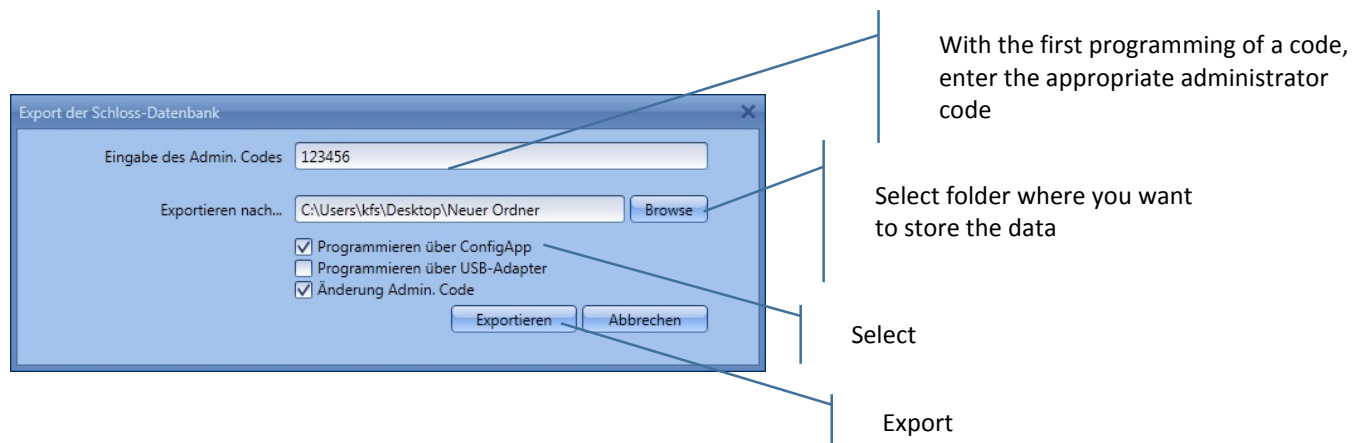

4. With the first programming of a new lock, you first need to determine a new administrator code for the administrator code of the lock.
5. Afterwards, the data will be stored as a zip file in the defined export folder or it will be attached to an email for sending it to the mobile device.
6. Open the attachment with the ConfigApp

The transmitted locks now appear in the lock list.


7. Select a lock for programming, a selection of the possible programming options appears.

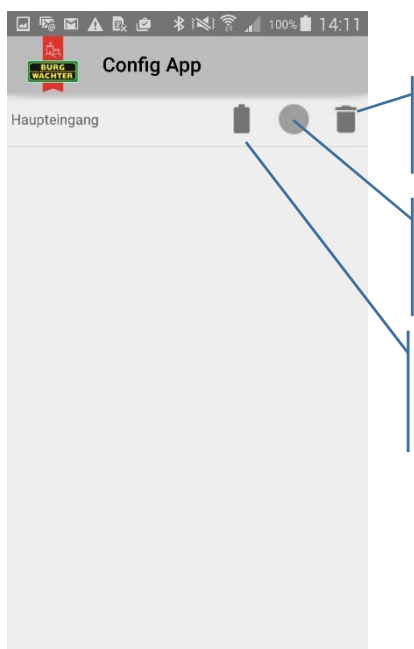

Remove lock from the list

Select for Programming

Display of battery charge level

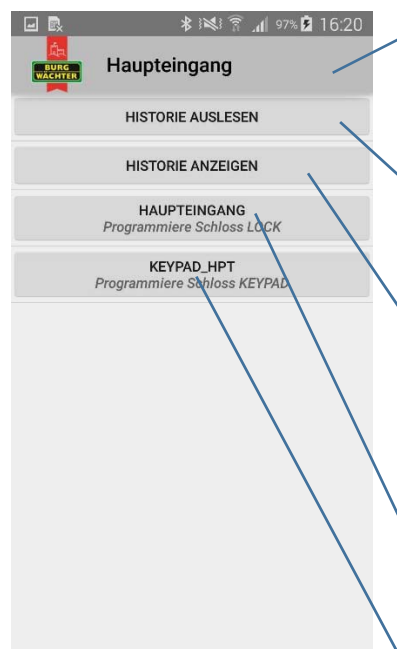

Label of the selected unit

Read out history of the unit display



history
of the
unit
on the
smartp


h
o
n
e

Pr
o
g
r
a
m
m
e
c
yl
in
d
er

P
r
o
g
r
a
m
m
e
k
e
y
p
a
d

Cylinder and keypad are being
programmed separately.

Programming of the cylinder

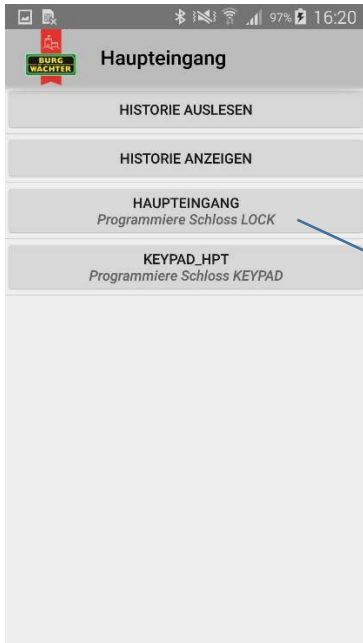


Pr
o
g
r
a
m
m
e
c
y
l
i
n
d
e
r




En
t
r
y
o
f
t
h
e
a
d
m
i
n
i
s
t
r
a
t
o
r
c
o
d
e

Start process

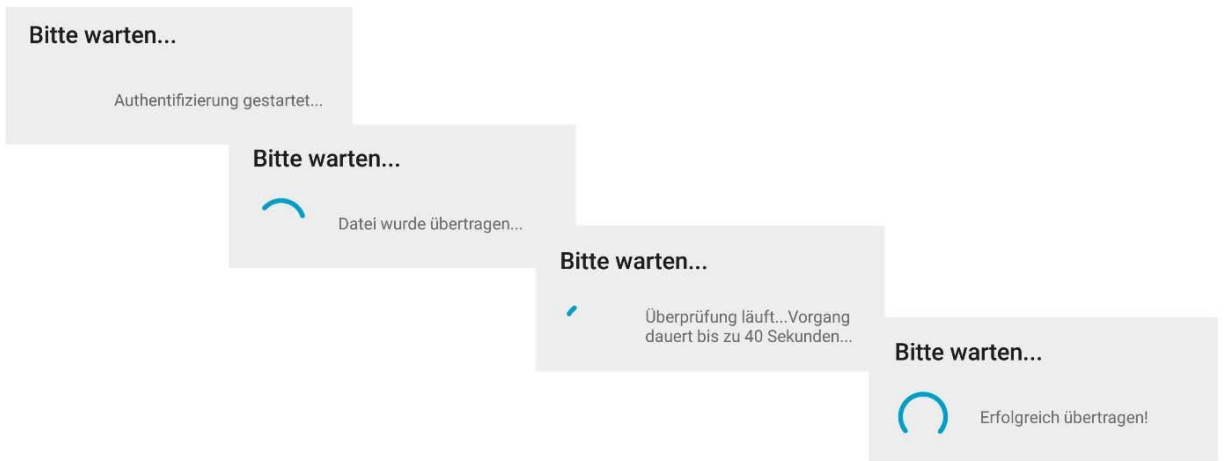


Programming of the keypad

The programming of the keypad is only possible if the programming via the PC software or the ConfigApp is being started within 40 seconds after an opening process via the keypad. Only within these 40 seconds, the keypad is ready for a communication via radio to save power.

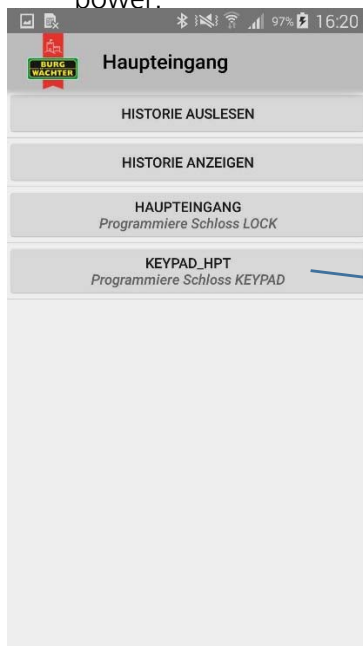


Program
me
keyp
ad

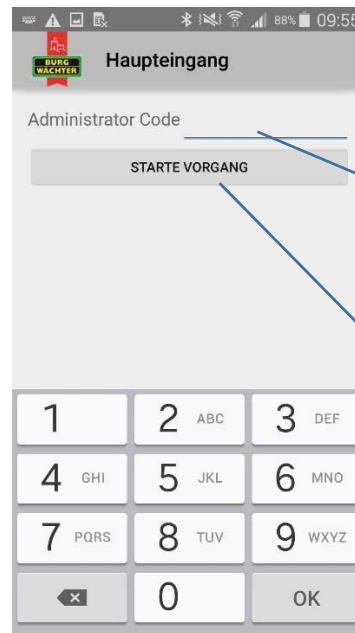


En
try
of
th
e
ad
mi
nis
tra
tor
co
de

Start process

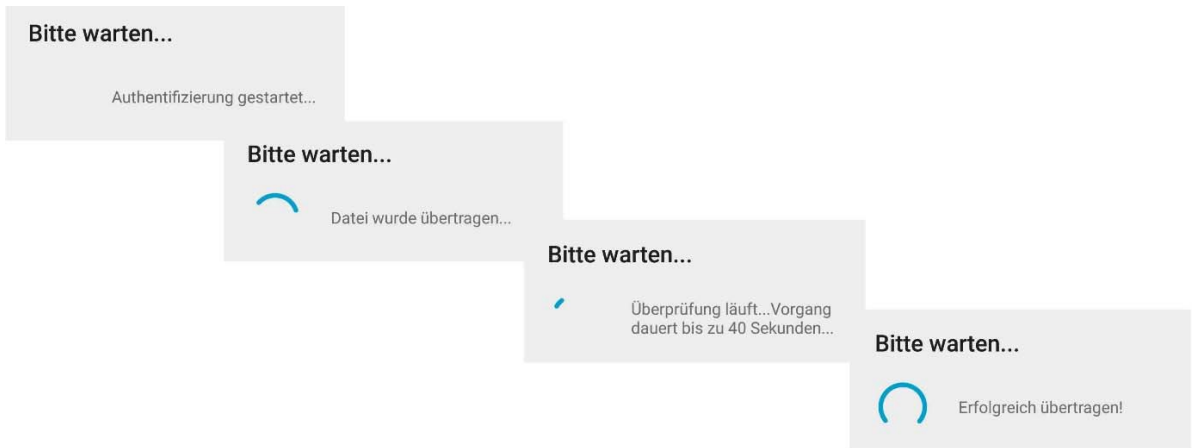

Reading out the history

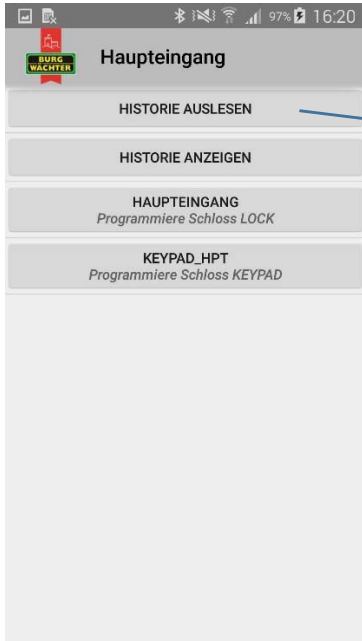


Reading of the history




Entry of the administrator code

Start process

Viewing the history

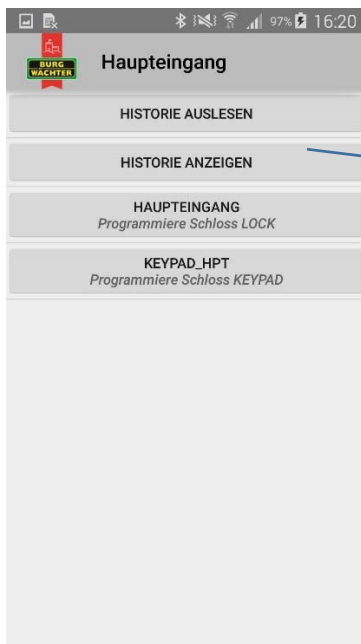

Viewing the history

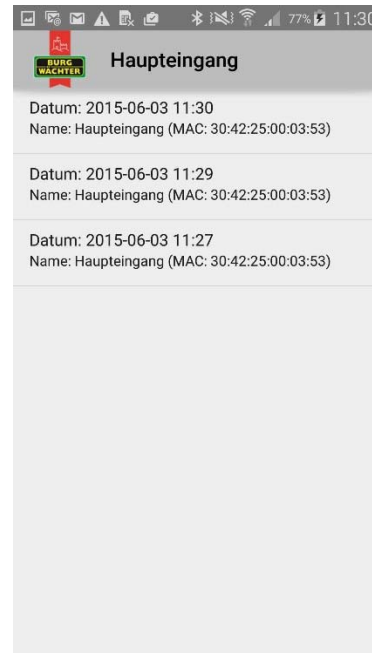

What further functions offers the ConfigApp?

Under “settings”, various other functions are available for you

1. Protect the App with a separate password.

This password needs to be entered with the starting of the App.

2. Entry of the administrator code

Enter the administrator code of the about to be programmed locking system. This is handy, as you can draw on the preset administrator code during programming of the units without entering the code all over again with each programming.

3. Display of version numbers


Here you can find information on the App version and on the licence terms.

4. Firmware Update

Under this menu, you can update your secuENTRY products to the latest version. The exact procedure is described in the following chapter.

Firmware Update

If you selected the menu **Firmware Update** under the menu settings, the latest product line of secuENTRY will appear from which you can choose your respective product.

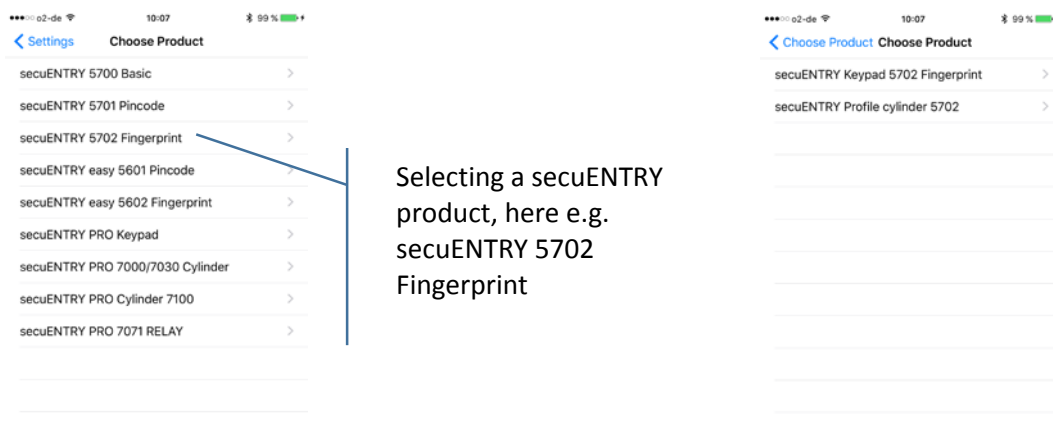


Please note: If you own a keypad to your cylinder, via this you can access the current version number of the system. For this, proceed as follows:


- Turn on the keypad via the button
- Afterwards, press FUNC, “Menu/Code change” appears
- Scroll with the button 2 until “Menu info” appears
- Confirm your choice twice with ←.
- Enter the administrator code. Version number of the keypad (IU, input unit) and of the cylinder (OU, output unit) will be displayed.

Update of a profile cylinder

Select the profile cylinder. For the respective cylinder, an overview of the available updates will be displayed. You can select the newest update directly and independent from the latest version of your cylinder.

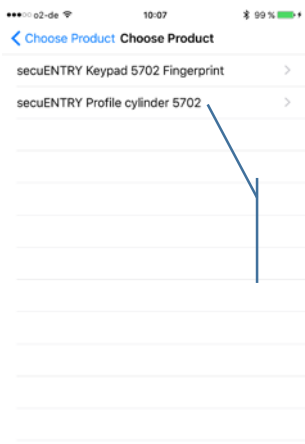

Selecting a profile cylinder

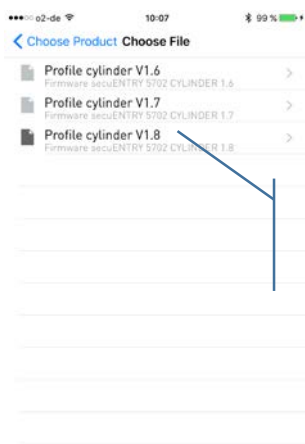


Selecting the latest update

Automatically, the scan function is activated to scan the QR code of the selected cylinder.



Scan QR code and confirm with *Done*

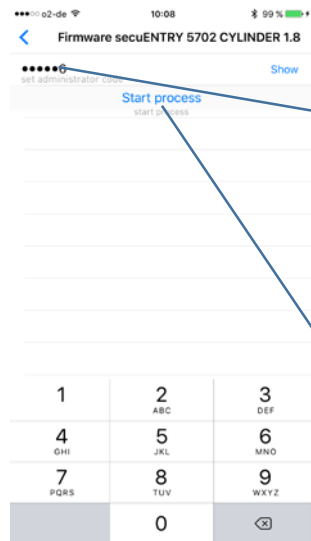

Enter the administrator code

Start update




Depending on the version and the smart device, the update takes ca. 8-14 minutes.


Update of the keypad

The update of the keypad happens separately from the cylinder. For the keypad, you need to update every version sequentially and cannot skip any updates; this is only possible from version 2.0.

Select the keypad you want to update.

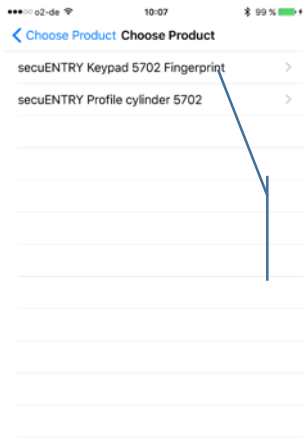

Selecting the keypad

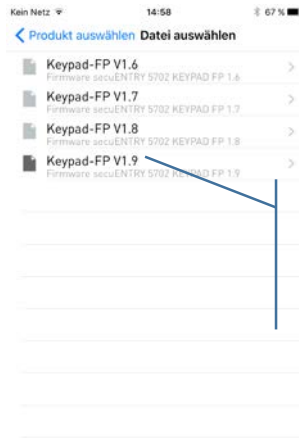


Selecting the next update (dependent of the current version)

The scan function is automatically activated to scan the QR code of the selected cylinder.



Scan QR code and confirm with *Done*

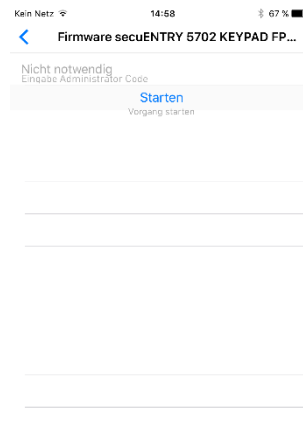


Please note: Do **not** start process yet!


Attention: Before you start the update, the keypad needs to be prepared!

For this, proceed as follows:

- Turn on the keypad via the button
- Afterwards, press FUNC – “Menu/Code change” appears
- Scroll with the button 2 until “Menu Administrator” appears
- Confirm with
- Scroll with the button 2 until “Admin. Settings. Setup” appears
- Confirm with

- The menu „Register“ appears
- Scroll with the button 2 until „Firmware update“ appears
- Confirm with 
- Enter the administrator code to receive authorisation for programming
- „Start the File transmission“ appears

Now, also confirm the start of the firmware update inside the ConfigApp.

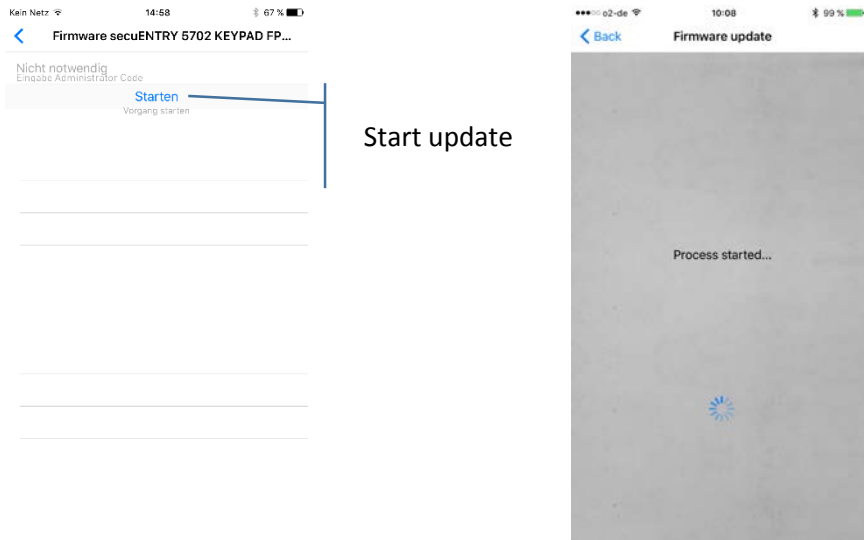

On the display of the keypad the note “In process” appears. Depending on the Version and smart device, the update will take ca. 8-14 minutes. A note appears after the update has been installed successfully.



Imprint

The copyright of this manual belongs exclusively to the BURG-WÄCHTER KG.

The reproduction, even on electronic data carriers requires the written permission of BURG-WÄCHTER KG. Reprinting – even in part – is prohibited.

Errors and technical alterations reserved.

© Copyright by BURG-WÄCHTER KG, Wetter (Germany)

BURG-WÄCHTER KG
Altenhofer Weg 15
58300 Wetter